


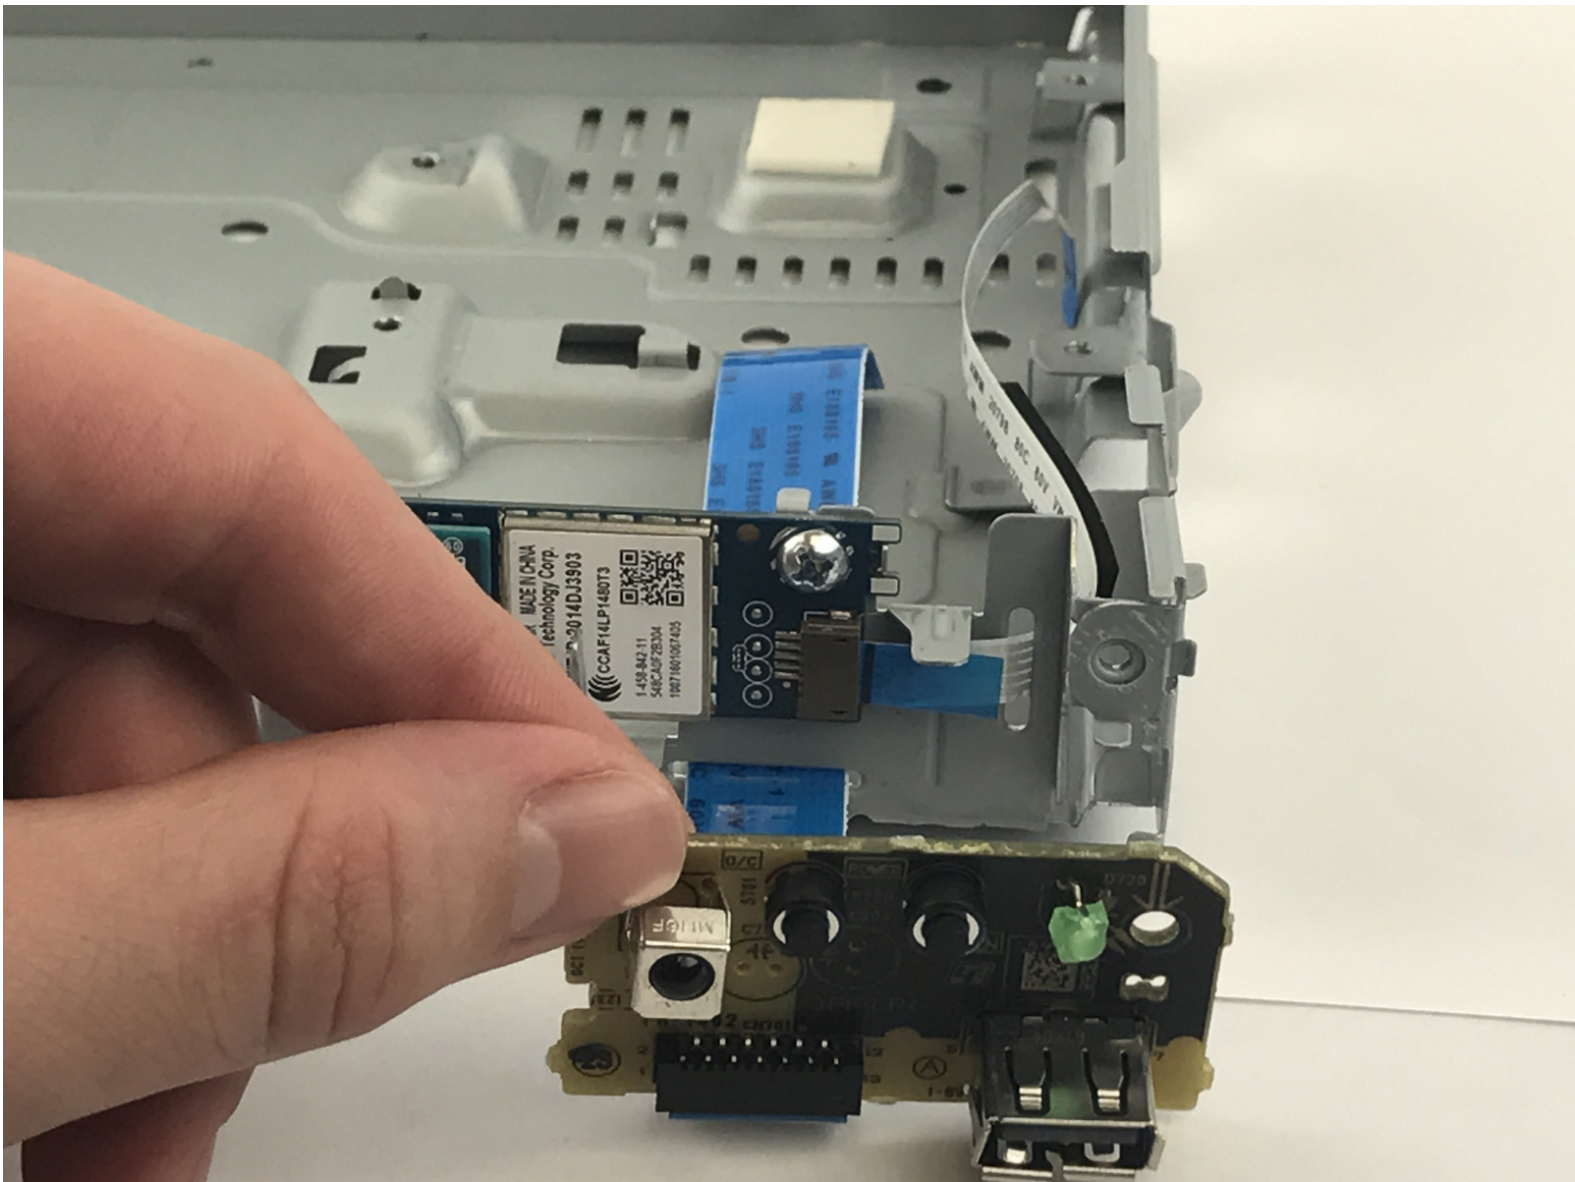

Sony BDP-S3700 Port Board Replacement

The port board is where the power and eject buttons, the IR sensor, and the USB port are located on the Sony BDP-S3700. This guide shows how to replace it.

Written By: Luiz Barreto



INTRODUCTION

The port board is where the power and eject buttons, the IR sensor and the USB port are located. This guide shows how to replace it.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Front Panel




- Use the PH1 screwdriver to remove the two 9mm screws on the back of the Blu-ray player.

Step 2



- Remove the back of the device by slowly sliding the rear outer housing backwards.

Step 3

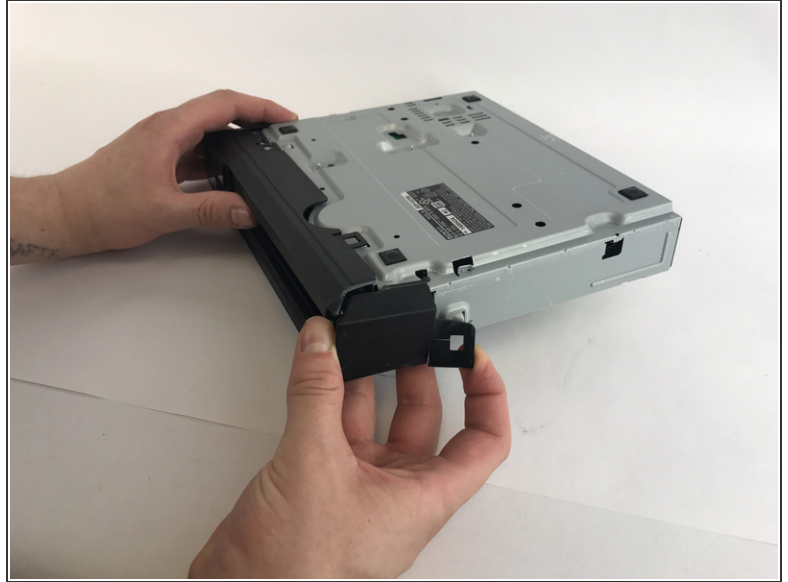


- Turn the Blu-ray over
- Pry open the clips under and on the sides

Step 4



- Once all the clips are open, slide the front outer housing out.


Step 5 — Port Board

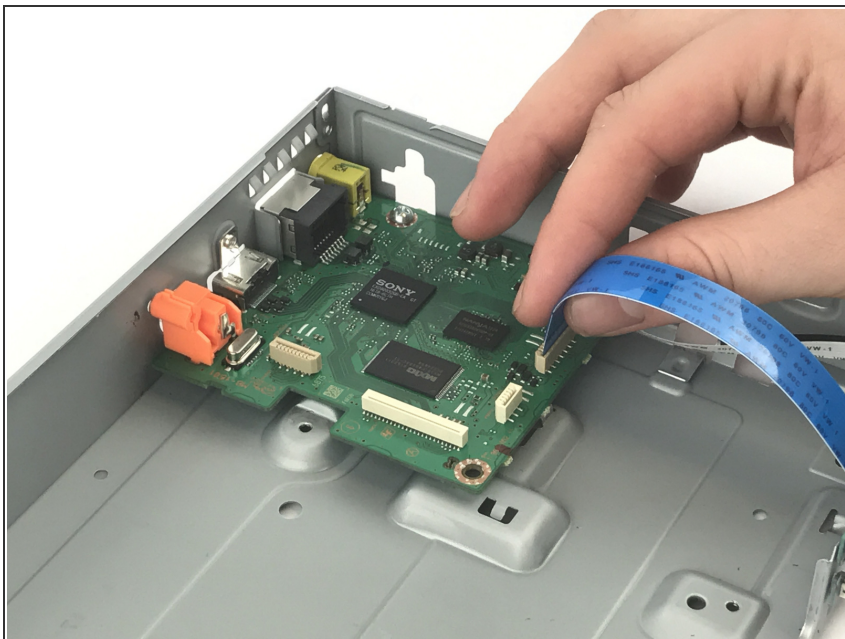

- Flip the Blu-ray back up
- Remove the ribbon connecting the port board to the motherboard.


⚠ Handle the circuits only on its side.

Step 6

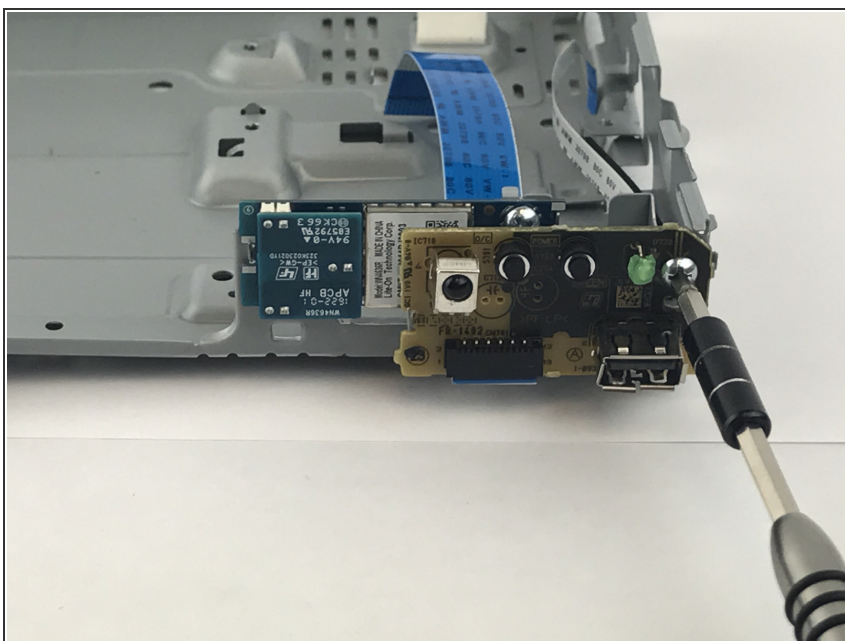

- Use the PH1 to remove the 7mm screw on the port board.

Step 7

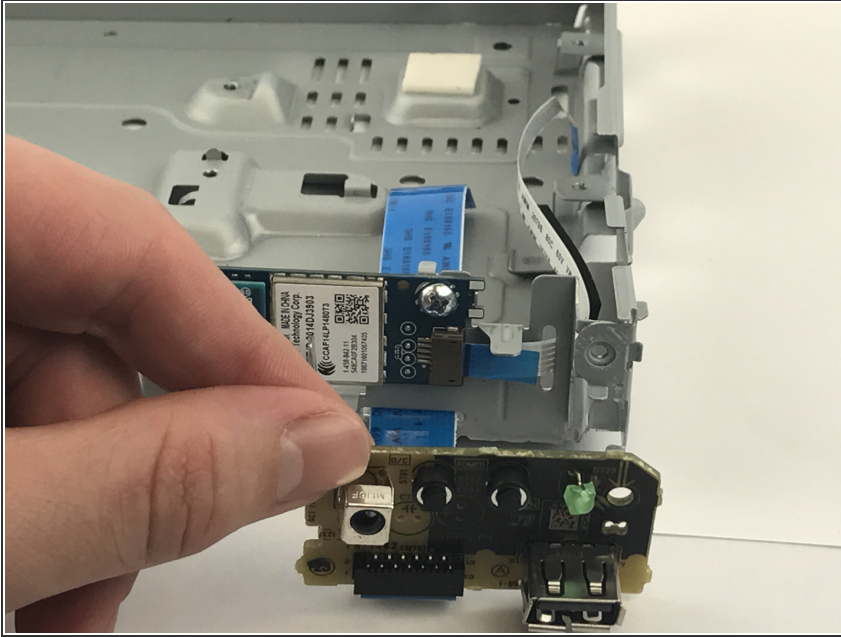

- Remove the port board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 06:11:42 PM.